

EXPERIMENT-4

AIM:

To setup and configure a LAN (Local Area network) using a Switch and Ethernet Cables in your lab.

How to set up a LAN:

Step 1: Plan and Design and appropriate network topology taking into account network requirements and equipment location.

Step 2: You can take 4 Computers, a Switch with 8, 16 or 24 ports which is sufficient for networks of these sizes, and 4 Ethernet Cables.

Step 3: Connect your computers to network switch via an Ethernet Cable, which is as simple as plugging one end of the Ethernet cable into your computer and the other end into your network switch.

Step 4: Assign IP address to your PCs

1. Log on to the Client Computer as Administrator or as Owner
2. Click Network and Internet Connection
3. Right Click Local Area Connection / Ethernet
→ Go to properties → Select Internet Protocol (TCP/IPv4) → Click on Properties → Select use the following IP address option and assign IP address.

IP Address Configuration Table

Device	IP address	Subnet Mask	Connected To
PC0	10.1.1.1	255.0.0.0	SwitchPort Fa0/1
PC1	10.1.1.2	255.0.0.0	SwitchPort Fa0/2
PC2	10.1.1.3	255.0.0.0	SwitchPort Fa0/3
PC3	10.1.1.4	255.0.0.0	SwitchPort Fa0/4
Switch	10.1.1.5	255.0.0.0	VLAN 1 Interface

Step 5: Configure the Switch Management IP

- Click the switch → CH tab
- Enter the following commands to assign a management IP:

enable

configure terminal

interface Vlan 1

ip address 10.1.1.5 255.0.0.0

no shutdown

exit.

Step 6: Verify Connectivity Using Ping

- Click a PC → Desktop tab → Command Prompt
- Use the ping command to test connectivity to the other PC's e.g., ping 10.1.1.2
- Successful "Reply from..." messages confirm connectivity.

Step 7: Demonstrate Data sharing

- Add a server device (Krd devices → server-PT) and connect it to switch.
- Assign it an IP address via its Desktop → IP Configuration tab.


c) Open the server's Services (Config tab) and enable the HTTP service.

d) From another PC, open the Web Browser (desktop tab) and enter the server's IP address to load the page, confirming successful data transfer across the LAN.

Step 8: Observe Packet Flow in Simulation Mode.

a) Switch to Simulation mode

b) Send a ping or web request between two devices and use the Play/Capture controls to step through the packet as it travels hop-by-hop through the switch, observing MAC-address based forwarding.

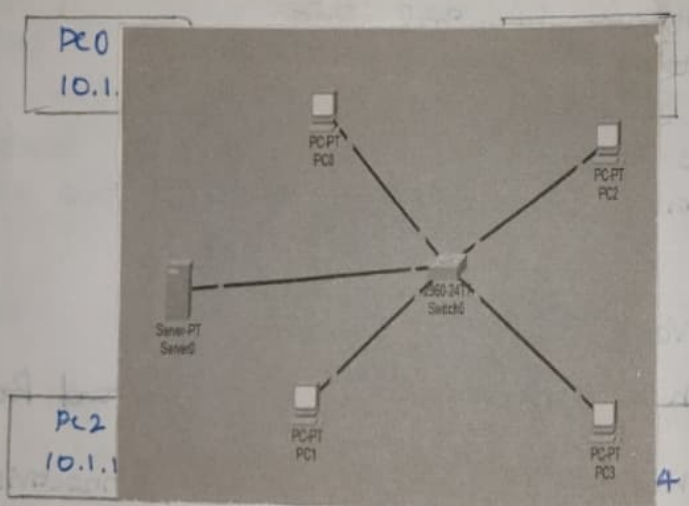

RESULT:

Thus the setting up a local Area network (LAN) has been executed successfully.

[Handwritten signature]